


Premium+ Chick-N-Barn Assembly Instructions

Item #01465


Tools Required: Standard Screwdriver

- (A)** 12-Bolts and Nuts: 2 1/2"
 - (B)** 8-Wood Screws: 1 3/4"
 - (C)** 8-Wood Screws: 1 1/4"
 - (D)** 6-Wood Screws: 3/4"
- Hardware Part #900140

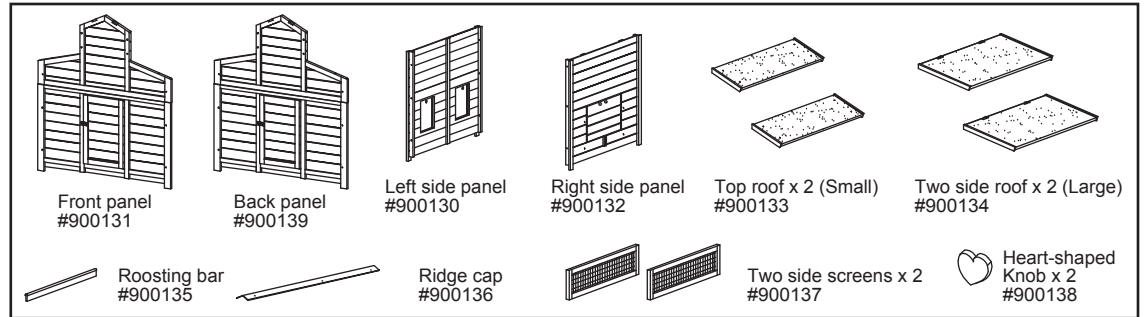


STEP 1

Unfold the Front and Back panels. Attach Left side panel to Back panel with two 2 1/2" Bolts and Nuts (A). Then attach Right side panel to Back panel with two 2 1/2" Bolts and Nuts (A). Then attach the Front panel with four 2 1/2" Bolts and Nuts (A).

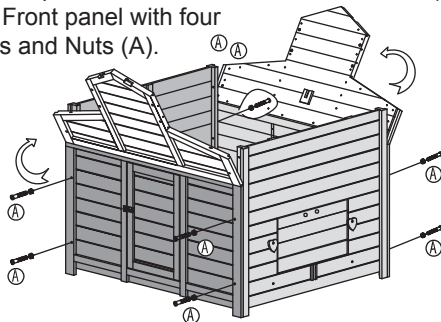


STEP 2

Secure the Front and Back panels with four 2 1/2" Bolts and Nuts (A). Place roosting bar in notched area in upper section. Attach each screen with four 1 3/4" wood screws (B).

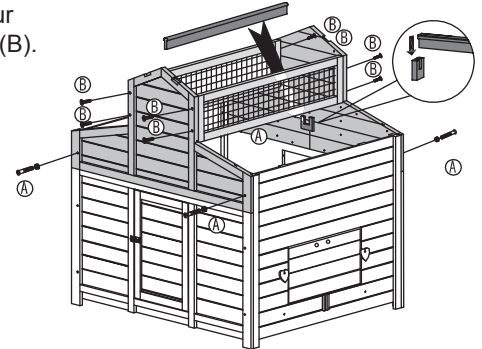

STEP 3


Slide the hinges together on each Large side roof to the Side screens and swing down to close.

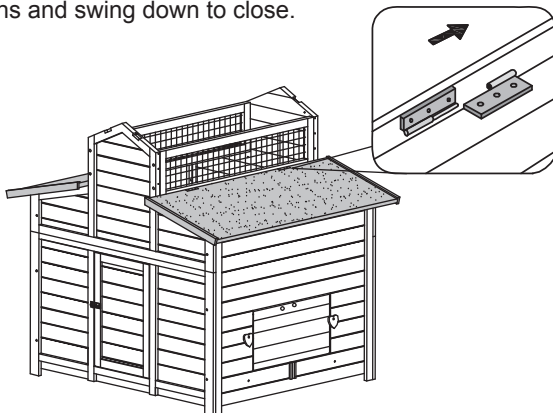

STEP 4


Attach each Top small roof separately using four 1 1/4" wood screws (C). Eight total wood screws (C) used in this step.

Item needs 8 pre drilled holes and 8 wood screws 1 1/4" in size.

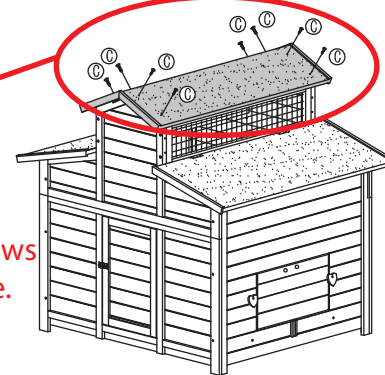


STEP 5

Attach Roof cap on Barn, align holes and secure with six 3/4" wood screws (D).

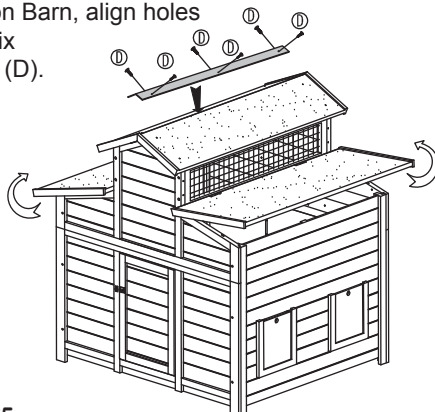

STEP 6

Finished Premium+ Chick-N-Barn.

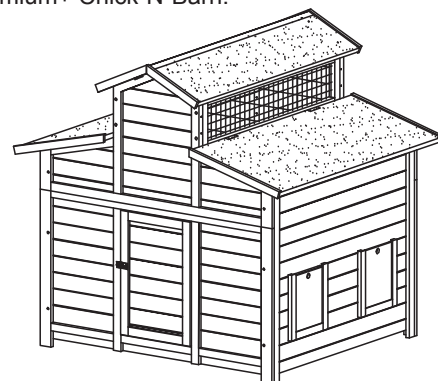

Item #01465



Made in China
to the exact design specifications of: WARE MFG. INC. Phoenix, AZ 85009, USA
www.waremfginc.com

WARE
Manufacturing Inc.