
Premium+ Chick-N-Pen Assembly Instructions

Item #01464


Tools Required: Standard Screwdriver

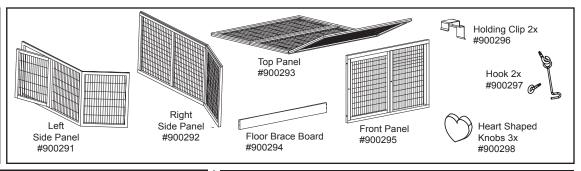






Spread out the Left and Right Side Panels, and attach the Floor Brace Board.

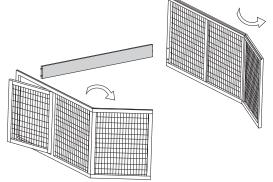


STEP 2

Attach the Front Panel by using eight 1 3/4" Wood Screws (A). Screw in the Heart Shaped Knobs.

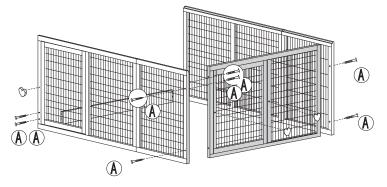

STEP 3

Attach the Top Panel by using four 1/2" Wood Screws (B). Set and lock the Top Panel with the Holding Clips.

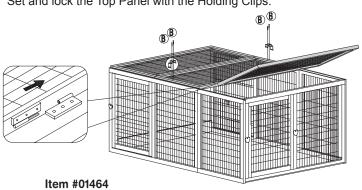



Align the assembled pen with the house (01460 or 01461) and attach with the hooks.

