

Premium+ Chick-N-Cottage Assembly Instructions

Item #14060

Tools Required: Standard Screwdriver

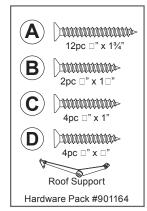

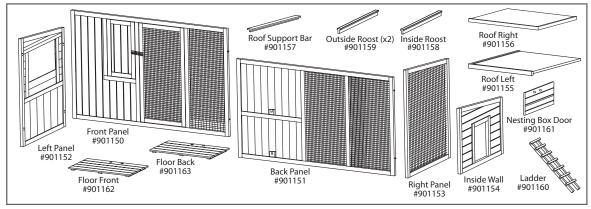

Congratulations on the purchase of your Ware Premium+ Chick-N-Cottage. The quality construction will provide your pet with a comfortable environment. Plus, assembly is quick and easy!

STFP 1


Connect the Front Panel to the Wooden Left Panel and the Mesh Right Panel using 4 - 13/4" screws (A). Attach the Inside Wall to the center of the Front Panel with 2 – 13/4" screws (A).


STEP 2


Attach the Back Panel to assembled hutch using $6 - 1 \frac{3}{4}$ " screws (A).

STEP 3

Attach the Inside Roost above the floor in the hutch. Place the two floor panels in place inside. Insert Roof Support bar into the butch.

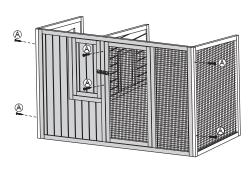

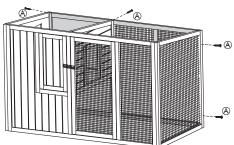

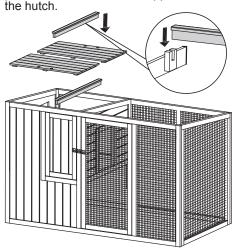

STEP 4


Attach the Roof Right piece onto the top of the pen using $2 - 1 \square$ " screws (B). Attach the two Outdoor Roosts inside the pen.


STEP 5


Attach Roof Left piece by sliding the two hinge parts together as shown, then secure with 2 - 1" Screws (C). Attach the locking Roof Support using $4 - \square$ " screws (D).

STEP 6

Your Chick-N-Cottage assembled!

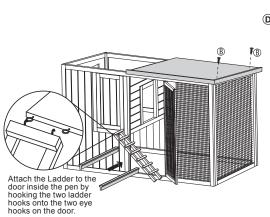

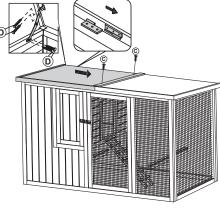

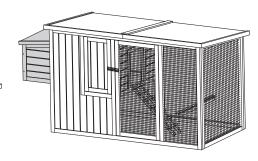

TIP: The nesting box door can be removed to allow addition of the Ware Premium+ Universal Chicken Nesting Box (Item #01475).

Care Tip

To protect the wood on your hutch you need to re-apply the protective stain finish at least 1x each year. Use a safe and non-toxic water based stain (available at your local paint or hardware center). Keep hutch in a safe area away from high winds and extreme temperatures.



If you have any questions or concerns, DO NOT RETURN TO STORE.

Contact our customer service department at 1-800-295-2243 and we will help you with any problems, Mon-Fri 8:00 - 4:00 MST or through our website at www.waremfginc.com.

