625 S. 27th Avenue Suite 120 Phoenix, AZ 85009 www.waremfginc.com




1-800-295-2243


Revised 02/10/09


Chick-N-Hutch · Assembly Instructions


Tools Required: Regular Screwdriver

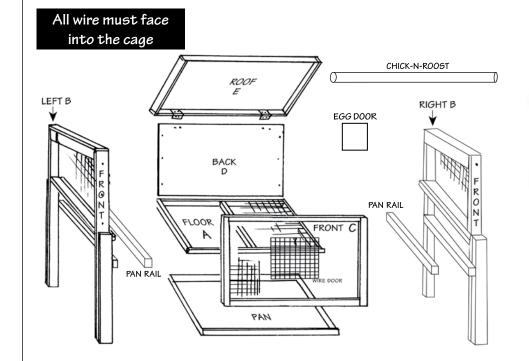

PARTS DESCRIPTION:

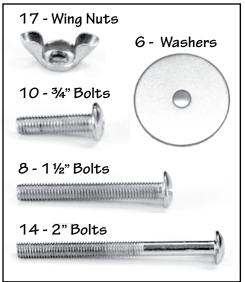

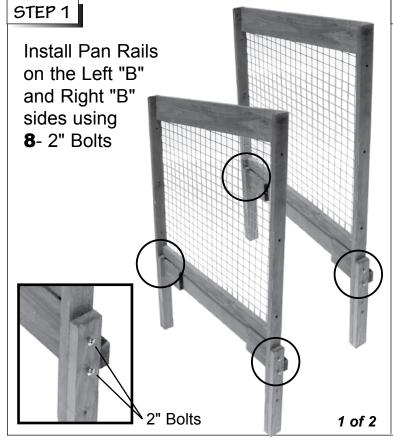

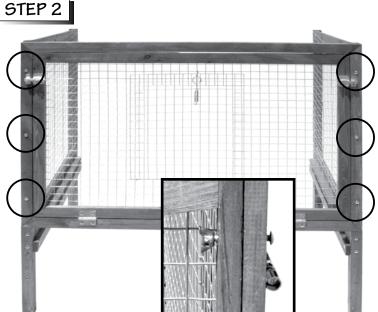



Fasten Side Panels **(B)** to Front Panel **(C)**. Use **6**- 2" Bolts and **6**- Wing Nuts.

Make Sure Door Faces Outward on Left Side and that the Hutch Slants to the Back.




Slide Floor into Bottom of Hutch, Wire Side Up. Align Side Holes and Fasten Back Panel (D) to Side Panels using **6**- 1 1/2" Bolts and **6**- Wing Nuts.

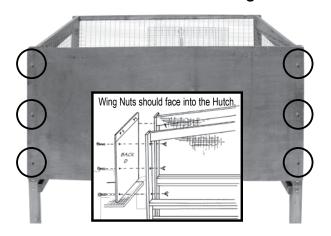

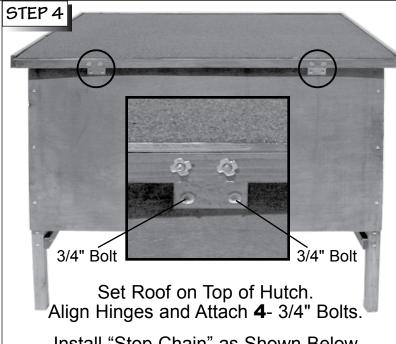

Install "Stop Chain" as Shown Below using 1-3/4" Bolt.

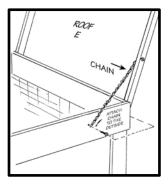




STEP 5

Slide Pan in Front Below Floor on Pan Rails. Attach Wind Guards to Outside Side Panels Using 4-3/4" Bolts,

4- Washers and **4**- Wing Nuts.

Attach Chick-N-Roost Using 2- 1 1/2" Bolts and 2- Washers

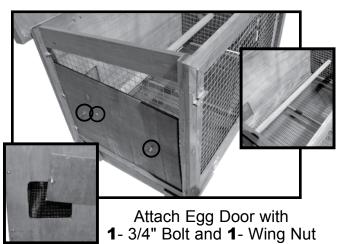



MADE IN CHINA

to the exact Design Specifications of WARE MFG.INC Phoenix, AZ, USA 85004 **VISIT US AT**

www.waremfg.com

Manufacturing lnc.