



Chick-N-Barn • Assembly Instructions (Item #01495)

Tools Required: Regular Screwdriver

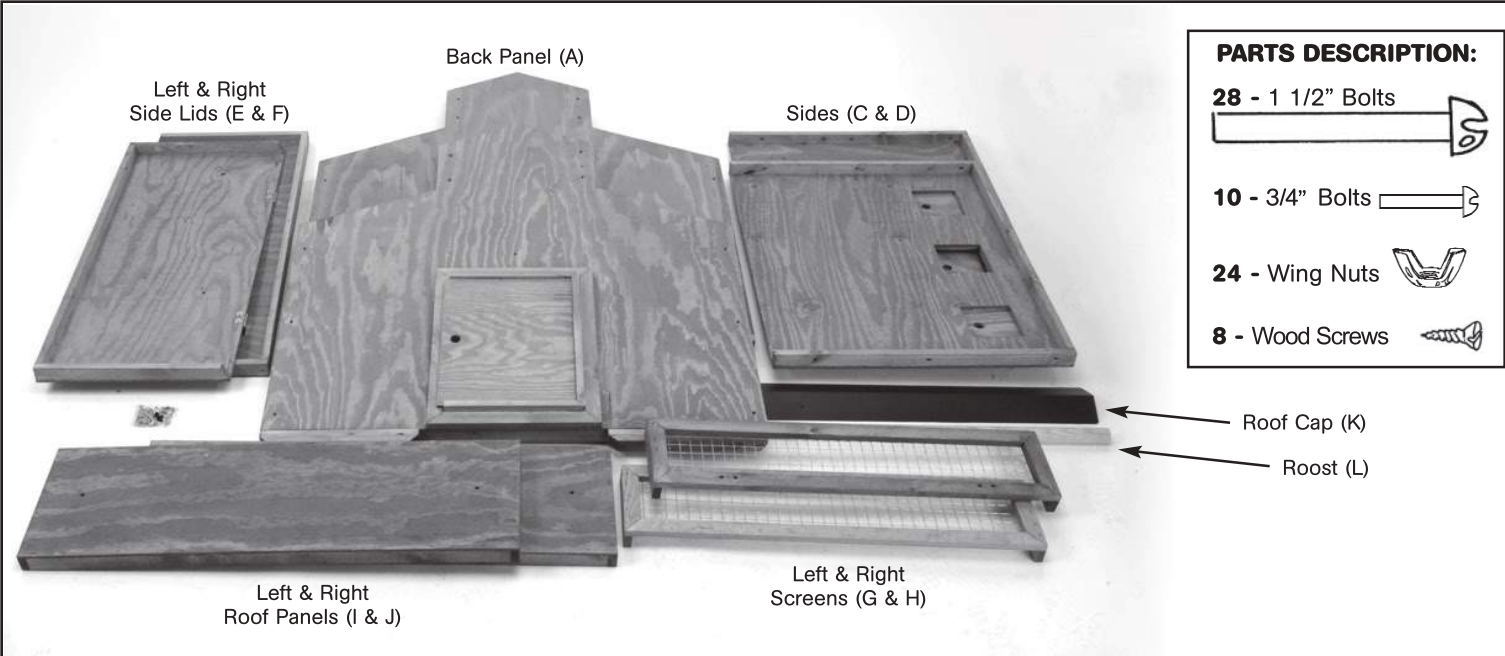


STEP 1

Unfold the Back Panel (A).

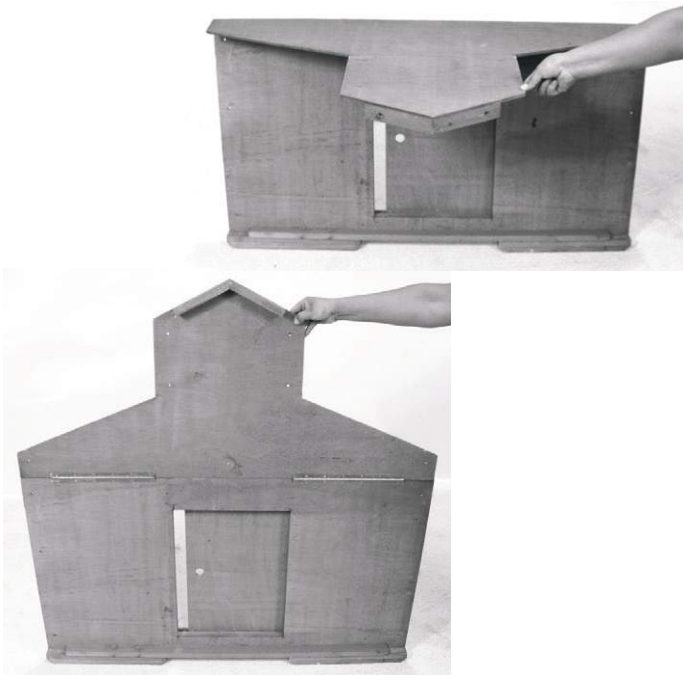


STEP 2

Attach Side (C) with egg doors to Back Panel (A). Secure with 4- 1 1/2" Bolts & 4- Wing Nuts.

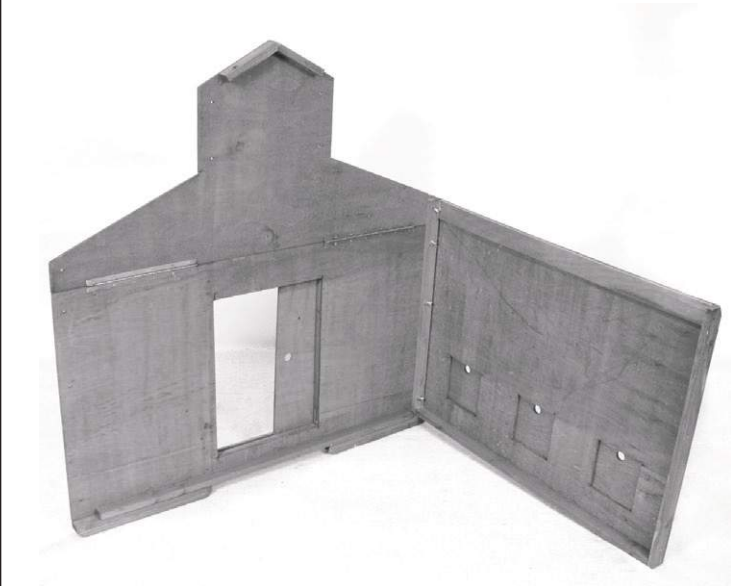

STEP 3

Attach Side (D) to Back Panel (A). Secure with 4- 1 1/2" Bolts & 4- Wing Nuts.

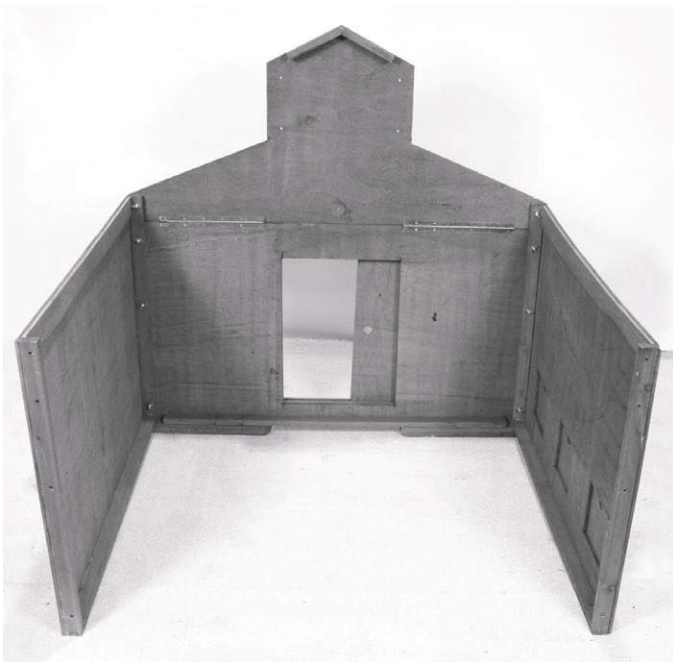

STEP 4

Attach Front Panel to sides with 8- 1 1/2" Bolts & 8- Wing Nuts. (If using with Yard, do not tighten bolts)



Before installing both side lids, insert Roost & secure each side with 3/4" Bolts.

STEP 5

Attach Screen (G) to left side Lid (E) with 4- 3/4" bolts. Then lift onto Barn. Repeat on other side.




STEP 6

Attach completed sides to Barn by aligning holes in screen to Barn holes. Secure with 4 - 1 1/2" Bolts and 4 - Wing Nuts. Repeat on other side.




STEP 7

Place Right Roof Panel (I) on Barn, align holes & secure with 2- 1 1/2" bolts. Repeat on other side.

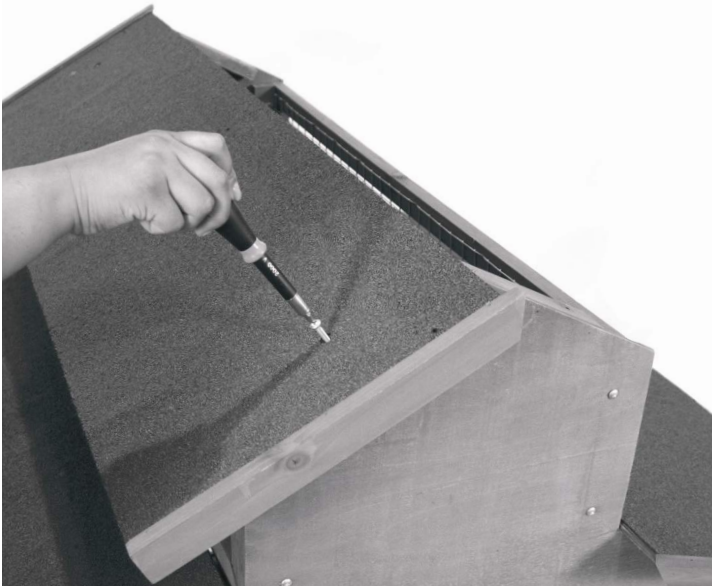

STEP 8

Place Roof Cap (K) on Barn, align holes & secure with 8- wood screws.

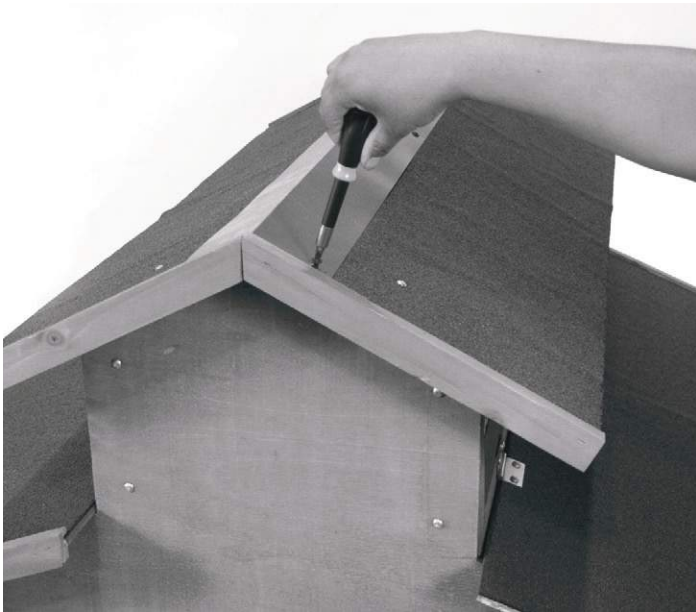

Finished Chick-N-Barn



TIP: This item (as any wood) should be periodically (every 12 to 18 months depending on climate) treated with a non-toxic exterior grade stain.

MADE IN CHINA
to the exact Design
Specifications of
WARE MFG. INC
Phoenix, AZ, USA 85009
VISIT US AT
www.waremfginc.com

